



## Inflatable Seal Installation Guide



This document outlines the steps for installing your new Inflatable Sealseal. Please read these instructions carefully before beginning the installation process.

### 1. Prepare the Installation Area

-  Clean and dry the mounting groove or channel.
-  Remove dust, grease, or old adhesive.




Why: Ensures strong adhesion and proper seal function.

### 2. Inspect the Seal

-  Check for any visible damage or deformation.
-  Confirm correct size, profile, and air inlet location.



Why: Prevents installation issues or failure during use.

### 3. Position the Seal

-  Carefully place the seal into the groove without stretching.
-  Align the air connection to its intended location.
-  For seals longer than 3 meters:
  - ➤ Install in a cross-pattern sequence (like tightening bolts).
  - ➤ Start at opposite ends and work toward the center.



Why: Prevents stretching and ensures an even fit without excess material.

### 4. Secure the Seal

-  **Adhesive Installation:** Apply compatible adhesive, press seal in gently.
-  **Mechanical Fixing (if used):** Install clips or screws per design.




Note: Follow adhesive cure times before inflating or testing.

## 5. Connect the Inflation System

-  Attach the air supply to the inflation port.
-  Use clamps or fittings as specified.




Pro Tip: Check connections for leaks using a soapy water spray.

## 6. Function Test

-  Inflate and deflate the seal.
-  Ensure proper expansion and uniform contact.
-  Watch for twisting, bulges, or gaps.

Why: Confirms readiness for operational use.

## Tips for Success:

-  Use soft tools to press the seal—avoid sharp edges.
-  Do not stretch the seal—let it settle naturally in the groove.
-  Wait for full adhesive cure time before inflating or loading.